




COLD TEMPERATURE USE of TRONAIR JETPORTER VEHICLES

Tronair JETporter vehicles with fully charged batteries can be cold soaked to -25°C (-13°F), however, the deliverable capacity of the batteries decreases in proportion to battery temperature. See chart below.

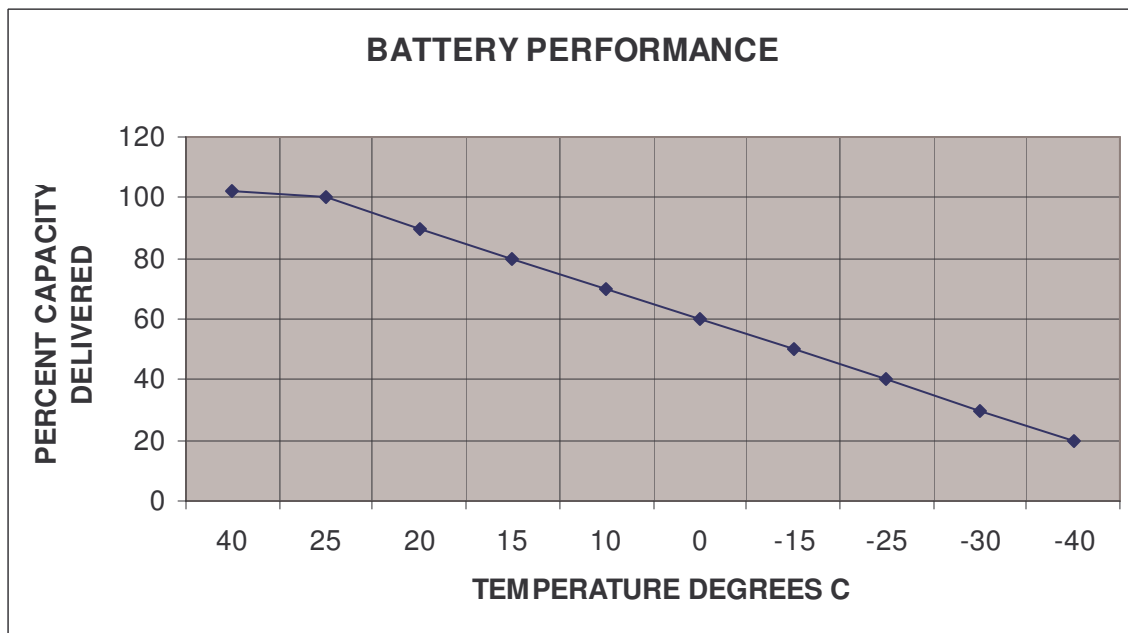

The JETporter vehicles should not be allowed to cold soak below -25°C (-13°F) and discharged batteries must not be allowed to freeze. Usage at temperatures below -25°C (-13°F) are acceptable but should be short in duration (1 hour or less). Warm storage will result in better battery performance.